




# Quick Start Guide

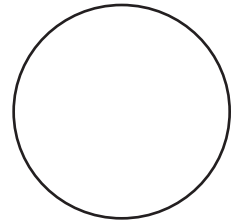


1. Place and level the Polar Breeze® unit in a location with unobstructed airflow for the air inlet and condenser exhaust.

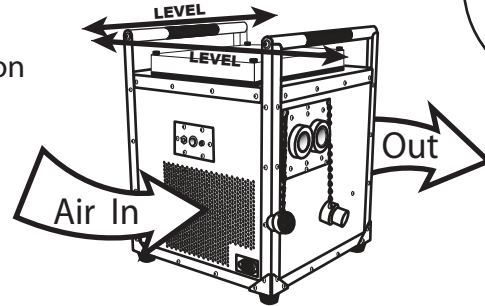


2. Push the IEC power cord into the Power Receptacle in the right lower corner of the Air Inlet side of the Polar Breeze® unit.

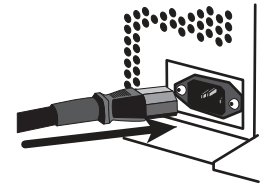


3. Start by depressing the Power (On/Off) button in the Power Panel

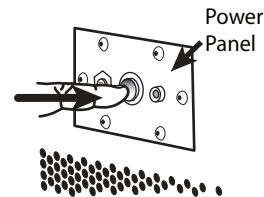

4. Remove the vented Port Plug from the Hose Port and insert a hose end into the Hose Port.

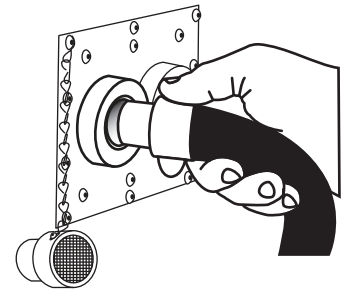

5. Attach the other end of the hose to the Hood. Place over user's head to cool head, lungs, blood, and internal organs. Tuck edge of the Hood beneath collar to cool chest and back. Alternately place hose within shirt or pants to cool body part(s) as desired.

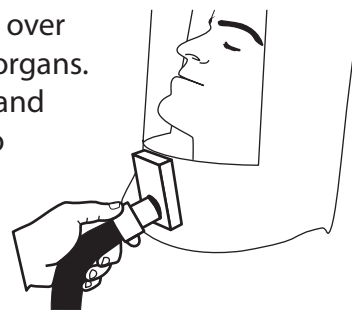

6. Enjoy the Polar Breeze® unit!

This **Quick Start Guide** is not intended to replace the *Operator Manual*. Please read, understand, and follow the *Operator Manual* for initial and continued safe and effective operation of the **Polar Breeze®** unit.

For questions, refer to the *Operator Manual* or call **Polar Breeze®** at 877-474-2841.